

# SECURITY SYSTEM GUIDE

To lock the vehicle and turn the alarm on, press the lock button on the key-ring transmitter once or turn the key towards the front of the vehicle and release.

To deadlock the vehicle, press the lock button again within 3 seconds of the first press, or using the key, turn the key towards the rear of the vehicle and then towards the front of the vehicle within 3 seconds and release.

For your convenience, pressing the headlamp button on the key-ring transmitter will turn the headlamps on for 25 seconds or until the button is pressed again.



To unlock the vehicle and turn the alarm off, press the unlock button on the key-ring transmitter.

If the key is used to unlock the vehicle, a ticking sound will indicate that the alarm is still active. To turn the alarm off, turn the ignition on within 7 seconds or press the unlock button on the key-ring transmitter and the ticking will stop.

To open the luggage compartment, press the luggage compartment release button on the key-ring transmitter.

To gain a full understanding of all features, please refer to the Security System Handbook.